


 Scan the code
to watch the video



deconovo
your home decor specialists

Motorized Roller Shade User Manual

| Bluetooth Motor

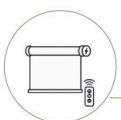

CONTENTS


01	Remote control pairing	
	Features, application & operation instructions	03
	Delete All Pairings(Method A & Method B)	04
02	How to install on the wall?	
	Preparation, accessories & inside mount	05
	Outside mount(Installation steps)	06
03	How to Connect the Bluetooth Motor to the Deconovo App	
	Bluetooth pairing & app control	07
	App features & settings	08



Remote control pairing


I .Features

- 1、Energy Saving Patent.
- 2、Built-in Rechargeable Lithium Battery Pack.
- 3、It has automatic correction function for the displacement generated by braking.
- 4、The built-in control parts of motor are sealed well for bettesafety
- 5、It's easy to switch the mode between inching and interlockand control operation direction.
- 6、Electronic limits setting,6 limits can be set (2 end limits and 4 middlelimits).
- 7、Short circuit protection & open circuit protection for sensor.
- 8、Built-in low power Bluetooth module and APP intelligent controfunction.

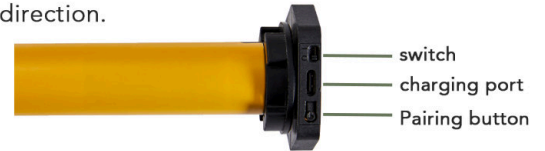

II .Application

 It can be fully charged within 4 hours,Please unplug the charger when fully charged.



! CAUTION!

Please charge lithium battery devices at least 6h every 6 months to extend battery life.

III.Operation Instruction

1.Power ON



Slide the switch to "I"
to turn on the motor



Press the Pairing
button for 1 second
then release it. The
motor will jog once



Press the UP button on the remote
The motor will jog again to confirm
the pairing is complete

2.Programming Preparation

*If there is no action in 10 seconds, the motor will exit programming automatically



1、 To set the upper limit, first open the battery cover on the back of the remote and locate the small programming button.

2、 Move the roller shade to the desired position. Press the round button on the back of the remote, then press the UP button, and press the round button again. The motor will jog to confirm the upper limit is set.

3、 To enable jog mode,press and hold thestop button for 5seconds. The motorwill jog once. Then press the stop button once. The motor will jog again to confirm jog mode is enabled.

3.Delete All Pairings

*Method A



First, press the pairing button twice with short presses (about 1 second each), then press and hold the pairing button twice (about 5 seconds each). The motor will jog twice, indicating that all remote control pairings have been successfully deleted. After unpairing, the remote control will no longer operate the roller shade.

*Method B




First, press and hold the middle button on the remote control for 5 seconds until the motor jogs once. Then press and hold the button on the back of the remote control for 7 seconds. The motor will jog twice, indicating that all remote control pairings have been successfully deleted.


How to install on the wall?

i *Your blind has been programmed before shipment. Please use it directly


1. PREPARATION

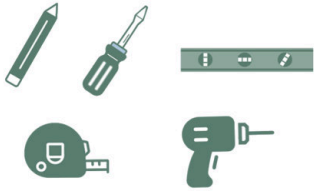


* Punch Diameter 0.2" (6mm)

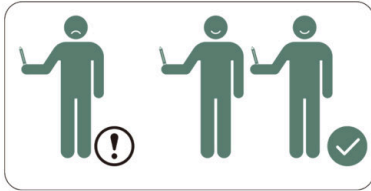

 2. ACCESSORIES



V

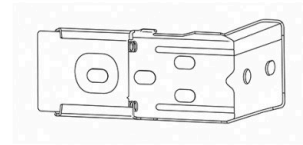

b xn




f xn


3. SHADES INSTALLATION (WITH VALANCE)

1. INSIDE MOUNT


01.

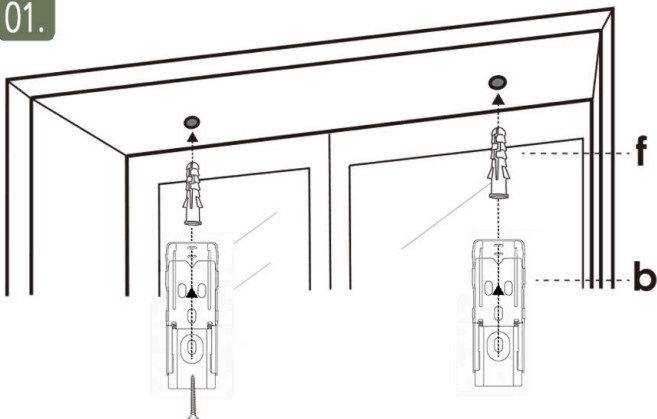

03.

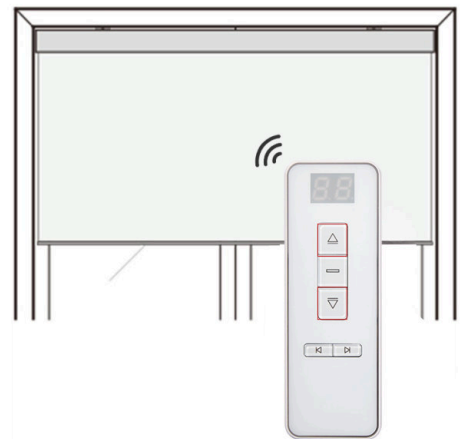


02.

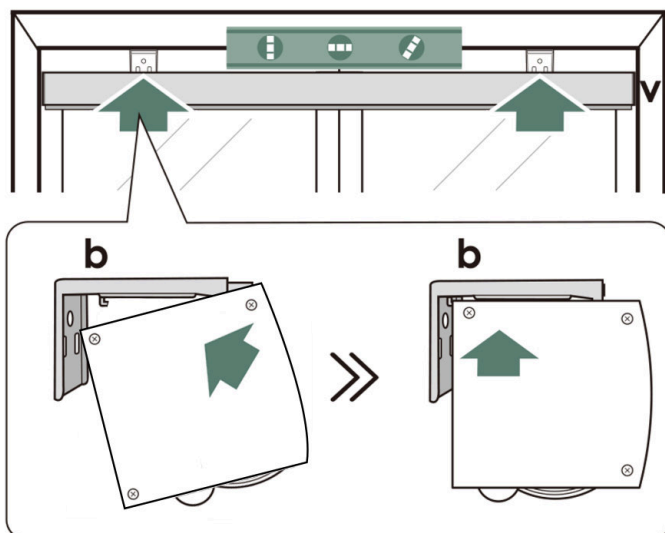


2. OUTSIDE MOUNT


01.

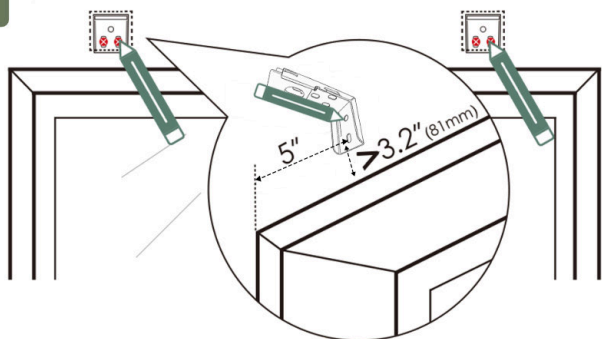


02.

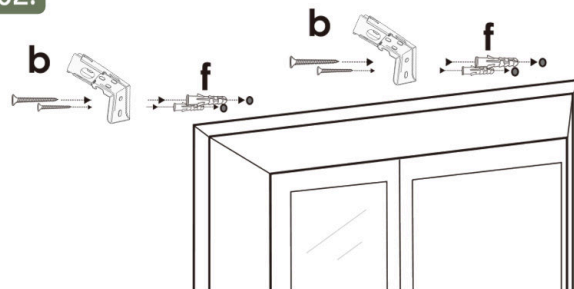


03.

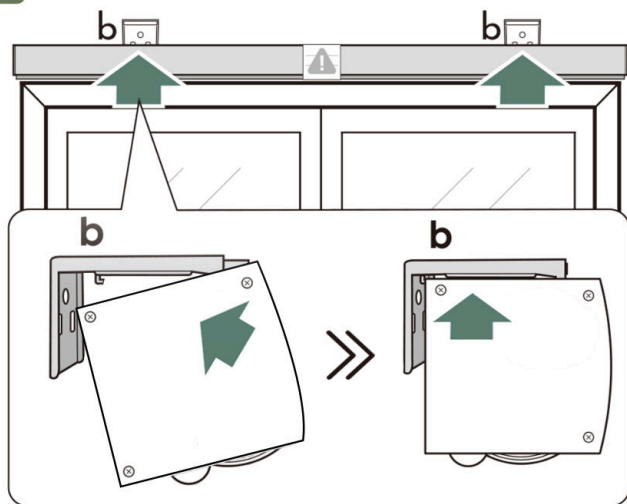

04.

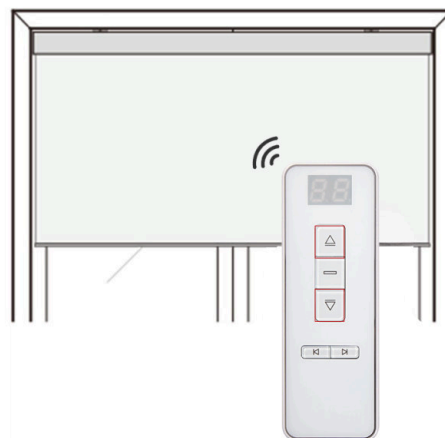

How to Connect the Bluetooth Motor to the Deconovo App

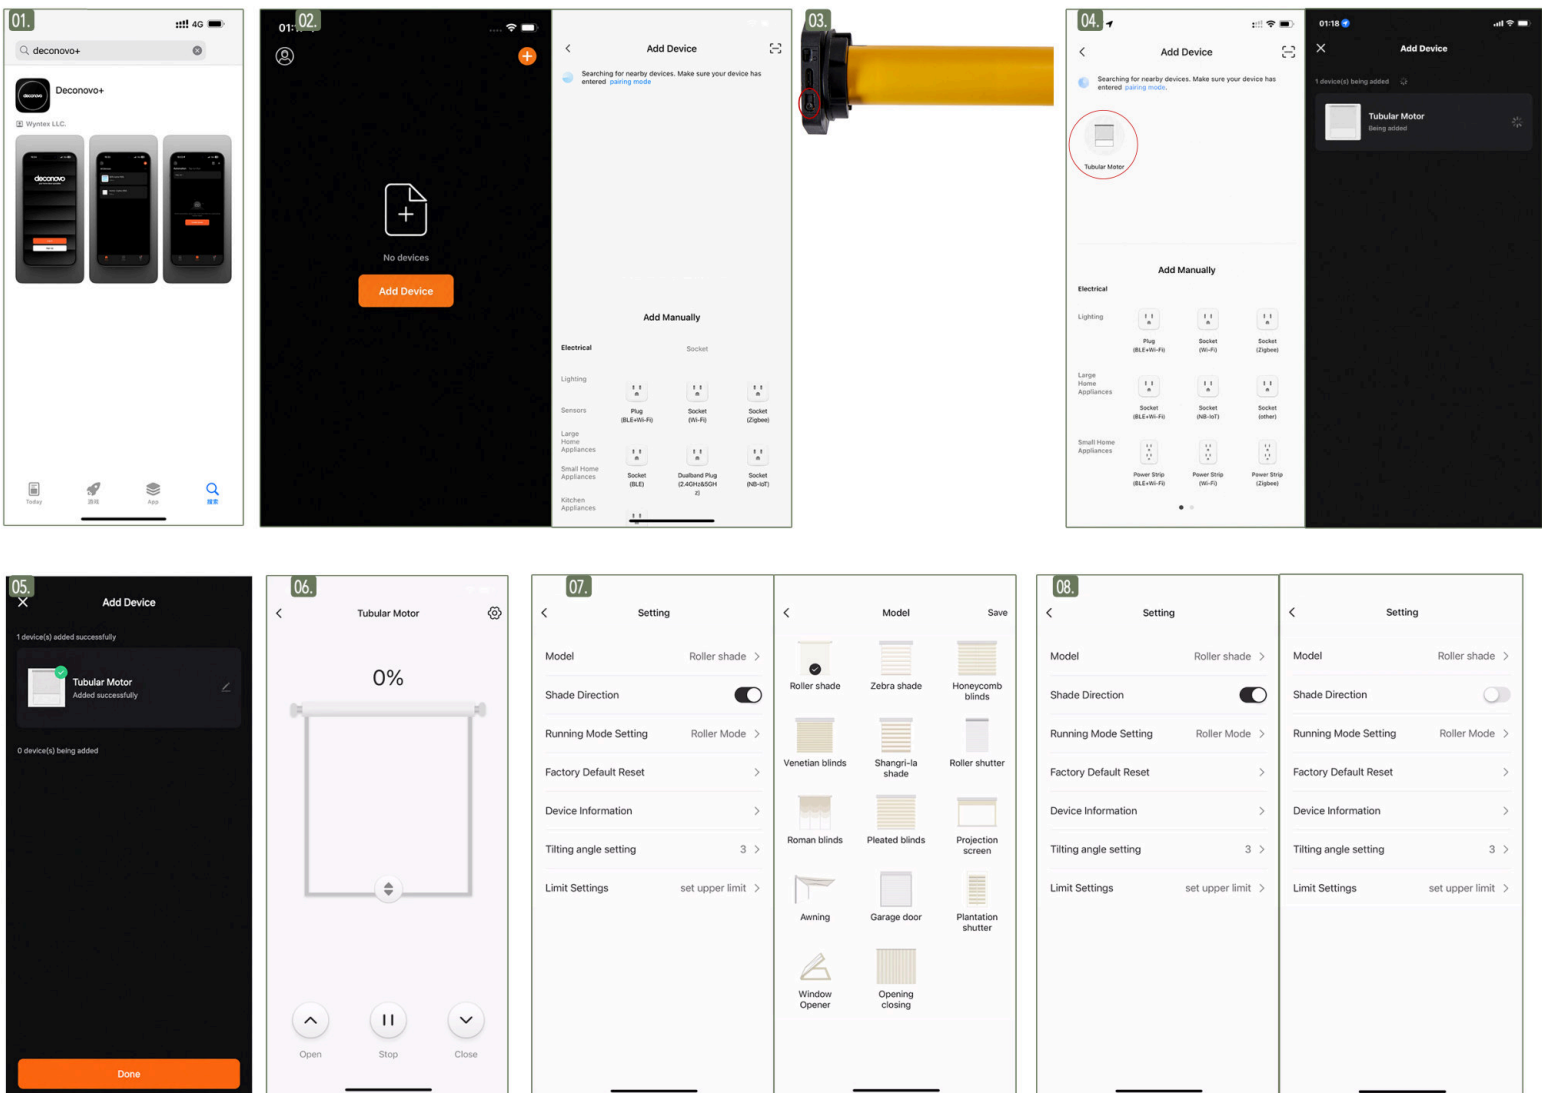

01、 First, download the Deconovo app from the App Store.Open the Deconovo app and sign in to your account.

02、 Tap "Add Device".

03、 Press the Pairing button on the roller shade 4 short presses 1 second each Then 1 long press Hold for 5 seconds Wait until the green LED starts flashing.


04、 The roller shade now appears in the app.Add the roller shade.

05、 Tap "Done".

06、 Control your roller shade with the Deconovo app.(Open, close, or pause the roller shade)

07、 Feature 1: Select the Shade Model.

08、 Feature 2: Reverse Direction.

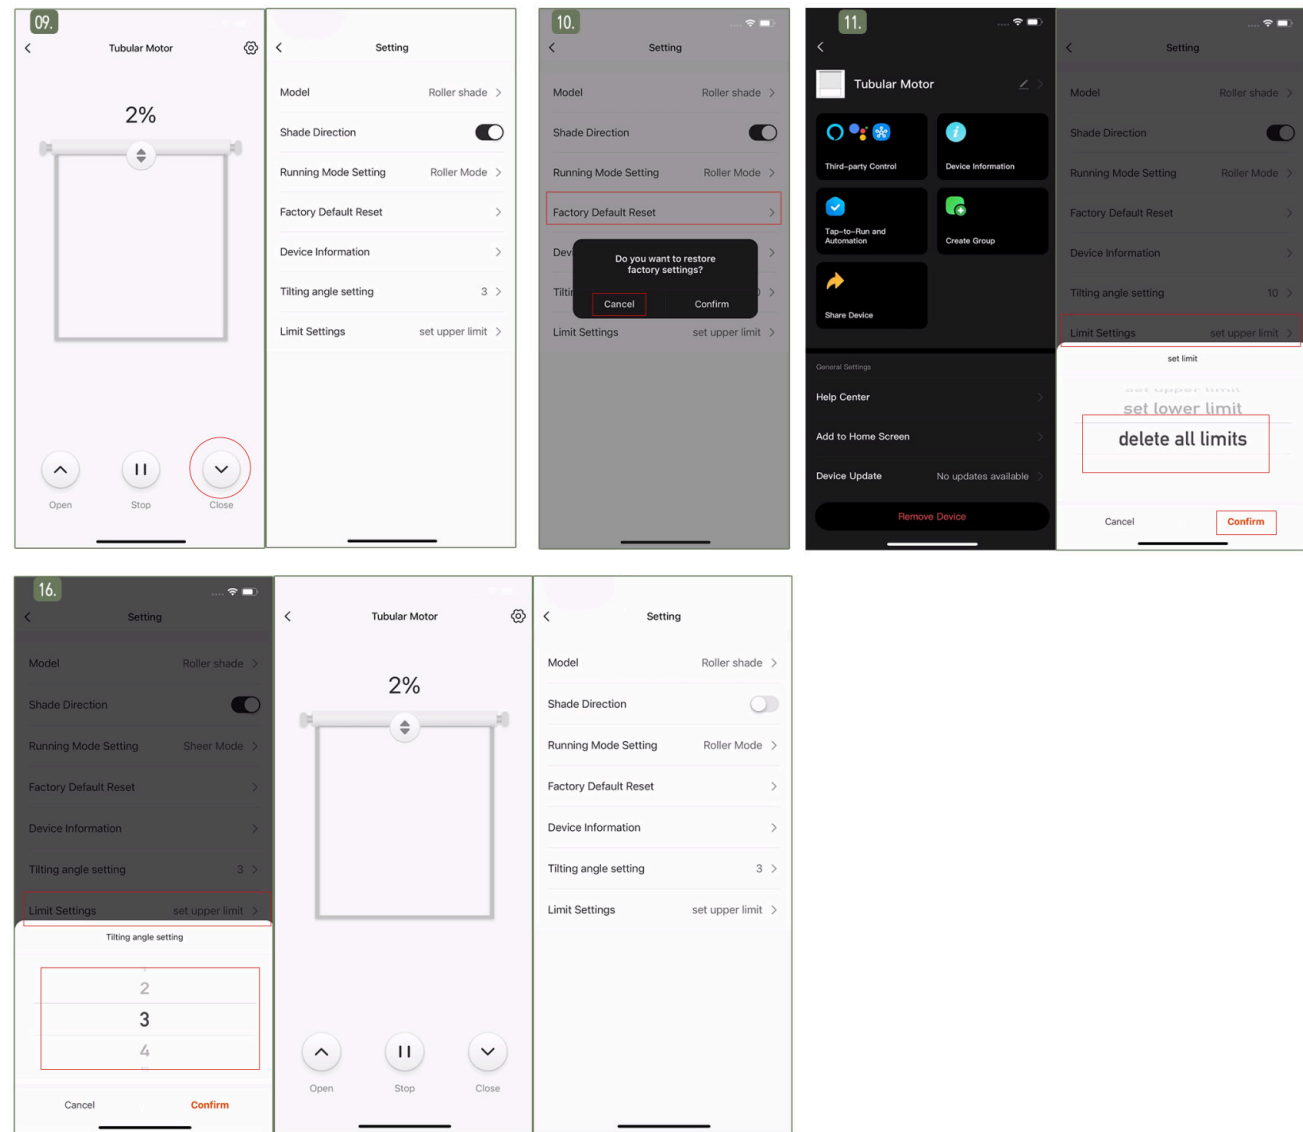

09、 Feature 3: Switch Between Jog and Continuous Mode.

10、 Feature 4: Factory Default Reset.

11、 Feature 5: Set the Upper and Lower Limits Set the maximum opening and minimum closing positions.(Set according to requirements)

12、 Feature 6: Select Jog Level.